





## Cleaning instruction WMF 1400




Please refer to WMF 1400 User Manual.

 Prior to the first cleaning read the Care chapter in the User Manual.

 Observe the Overview of cleaning interval Schedule in Care chapter in the User Manual.

 Never reach under the spouts while cleaning the machine.

 Ensure that the mixer hose is replaced securely because hot liquid may escape.
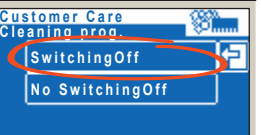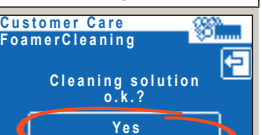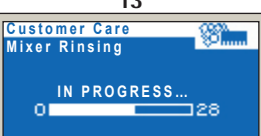
<p><b>1</b></p>  <p>* Touch clear pad</p>	<p><b>2</b></p>  <p>Additional pads are activated. * Touch <b>MENU</b> pad</p>	<p><b>3</b></p>  <p>* Touch  (Care)</p>	<p><b>4</b></p>  <p>The Menu  (Care) appears with the options. * Touch <b>Cleaning Prog.</b></p>	<p><b>5</b></p>  <p>* Touch <b>Switching off</b></p> <p>Select "no switching off" here, if needed.</p>
<p><b>6</b></p>  <p>* Touch <b>Start</b></p> <p>The cleaning program starts.</p>	<p><b>7</b></p> <p>Mix 0,17 US fl. oz (5 ml) of WMF special cleaner with 17 US fl. oz with (0.5l) of warm water * Insert milk hose</p> <p> <b>Caution.</b> Never reach under the spouts while cleaning the machine.</p>	<p><b>7.1</b></p>  <p> <b>Caution.</b> Ensure that the mixer hose is replaced securely because hot liquid may escape.</p>	<p><b>8</b></p>  <p>When Step 7 is completed: * Touch <b>Yes</b></p>	<p><b>9</b></p>  <p>Cleaning runs for 30 secs.</p>
<p><b>9.1</b></p> 	<p><b>10</b></p>  <p>* For water rinse fill with 6.12 US fl. oz (0.3l) of clear, cold water * Insert milk hose * Touch <b>Yes</b></p>	<p><b>10.1</b></p> 	<p><b>11</b></p>  <p>Rinse runs for 30 secs.</p>	<p><b>11.1</b></p> 
<p><b>12</b></p>  <p>Display with foamer cleaning reminder appears. For foamer cleaning see next page, steps A to C. * Touch <b>OK</b></p>	<p><b>13</b></p>  <p>Mixer cleaning starts. Duration: 30 secs.</p>	<p><b>13.1</b></p> 	<p><b>14</b></p>  <p>* Touch <b>Start</b></p> <p>Machine cleaning starts.</p>	<p><b>15</b></p>  <p>* Empty grounds container and drip tray * See steps 16 to 19</p> <p> <b>Caution.</b> If not connected to main drainage, place receptacle (0.6 US gal./2 litres) underneath.</p>



**16**



- \* Push combi spout fully upwards
- \* Lift the adjustable screen

**17**



- \* Remove and empty grounds container

**Caution.**  
Never reach into the brewing unit.


**18**



- \* Pull drip tray out and empty it
- \* Replace drip tray


**Caution.**  
Without a drain connection, the drip tray must be emptied.

**19**




- \* Replace grounds container
- \* Lift the adjustable screen

**20**



*Manual insert is either in the centre between the product containers or in the centre behind the containers.*


**20.1**



- \* Open the manual insert lid
- \* Add a special WMF cleaning tablet


**Caution.**  
Ensure that the mixer hose is replaced securely because hot liquid may escape.

**20.2**

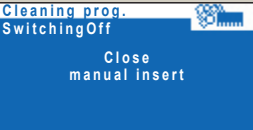

- \* Close the manual insert lid


**21**

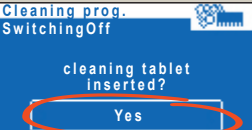

*Cleaning tablet inserted?*


- \* Touch **Yes**

**22**

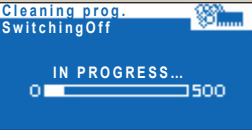

*Machine cleaning starts. Duration approx. 8 - 10 minutes.*


**22.1**



**Combi spout cleaning at least 1 x daily**

*Prior to cleaning, switch off at ON/OFF button. Pull out mains plug.*

**A**




- \* Pull forward the lever behind the combi spout
- \* Remove combi spout
- \* Remove milk hose from milk container and release from combi spout

*If a Mixer is fitted:*

- \* Release the mixer hose

**Caution.**  
Carefully disconnect the milk hose.

**B**



- \* Dismantle combi spout
- \* Soak all parts of combi spout together with milk hose in the cleaning solution


*If a Mixer is fitted:*

- \* Soak mixer hose in the cleaning solution

*All parts must be completely immersed.*

- \* After 5 hours clean all parts thoroughly with a brush

**C**



- \* Rinse combi spout and milk hose very thoroughly with clear water so that no cleaning fluid remains


*If a Mixer is fitted:*

- \* Rinse mixer hose very thoroughly
- \* Reassemble combi spout
- \* Replace combi spout
- \* Insert milk hose


*If a Mixer is fitted:*

- \* Insert mixer hose

**Foamer Cleaning**

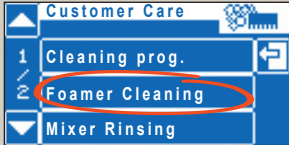


**Foamer cleaning only**


- \* On submenu  (Care) touch **Foamer Cleaning**

*See steps 6 to 12.*

**Mixer Rinsing**

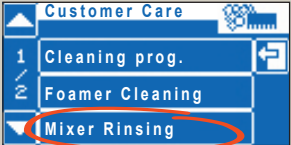

**Mixer rinsing only**

- \* On submenu  (Care) touch **Mixer Rinsing**

*Mixer rinse runs for 30 secs.*